


SABER

Surface Disinfection

VIOLIGHT
UVC Disinfection

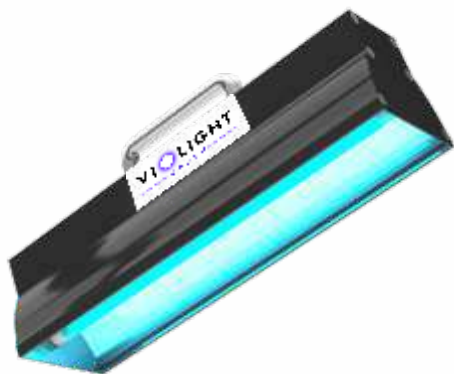

UPTO
99.9%*
Disinfection
Guaranteed

* Refer DOSAGE CHART for reference

The **FORCE** in your **HANDS**

VIOLight Saber is a handheld portable direct UVC disinfection device that is very effective for surface disinfection. It is designed to deactivate viruses, bacteria, mold & fungi in spaces where traditional fixed UVC fixtures cannot be used. It is the preferred disinfection device for applications where a permanent UVC installation is not a practical solution & can be used to reduce or eliminate pathogens in spaces that do not need constant exposure to UVC light.

The science of disinfection by UVC light is well documented. It's been used historically for the last over 100 years for its germicidal properties and has proven to be very effective in controlling the growth of germs and reducing the spread of infections.



Rapid disinfection of
common bacteria, viruses &
fungi on hard to reach surfaces



Reduces the risk of
transmission of cold,
flu & other illnesses




Dry, Chemical-free disinfection
with no further need for
wiping surfaces



NO WAIT TIME
Area can be used immediately
after disinfection

SABER Applications

VIOLight Saber is a modern day device to fight germs using a proven and effective UVC technology. It is very effective in disinfecting surfaces that are hard to reach as well as high touch surfaces that require frequent disinfection. Common environments include restaurants, offices, factories, laboratories etc. It is ideal for the disinfection of the following.

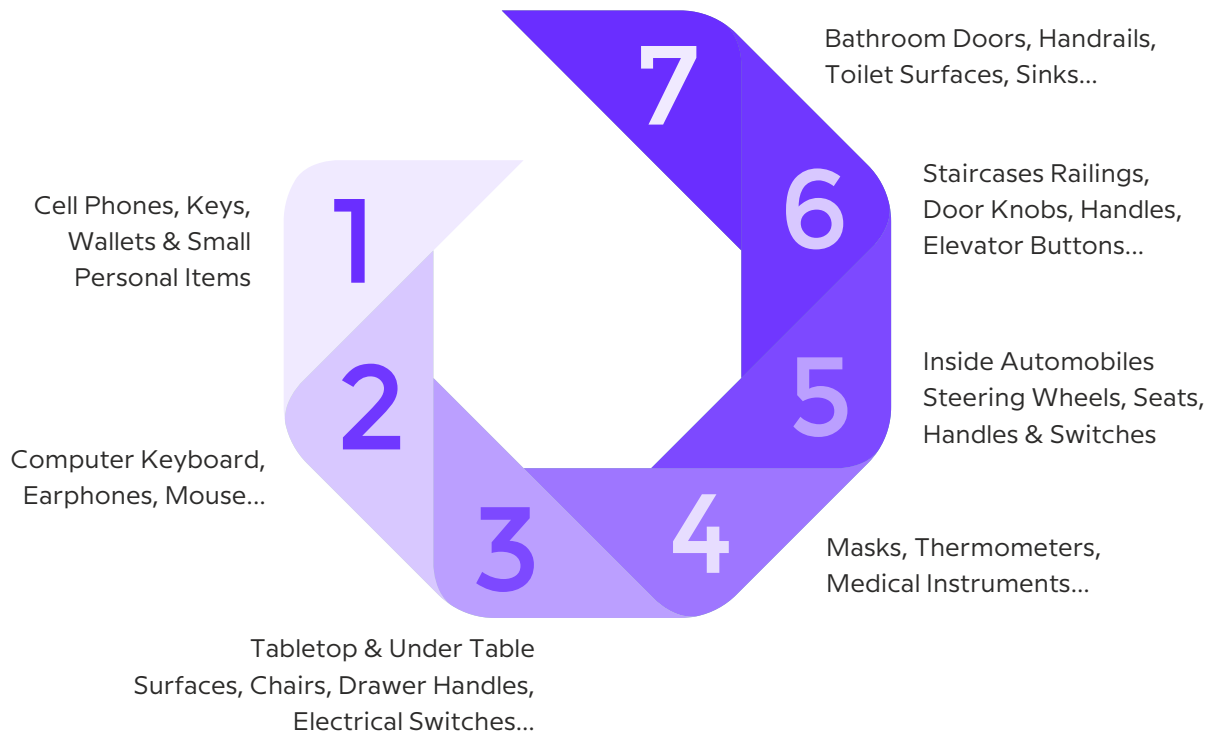

SABER Variants



PROVEN
TECHNOLOGY



HIGHEST
LAMP QUALITY



SAFETY MESH
INCLUDED
(Available only in
large variant)



REDUCE
DISPOSAL &
REPLACEMENT
OF PPE



CHEMICAL-FREE
LEAVES NO STAIN
OR RESIDUE



SURFACE SAFE
DOES NOT HARM
UNCOATED METAL
SURFACES

Available in 2 colors



Available in 2 colors



Regular	16w UVC Lamp	1600μW/cm ²	0.9 kg
---------	--------------	------------------------	--------

Large	20w UVC Lamp	2700μW/cm ²	1.2 kg
-------	--------------	------------------------	--------



SABER Features

The VIOlight Saber is fully portable and plugs into any standard 230v outlet.
Each VIOlight Saber features the following

Lightweight extruded aluminum single piece body	2m 3-pin molded power cord
High quality anodised / powder coated finish	Oversized handle to maximize grip comfort
High output lamp generating 253.7nm of germicidal UVC	$> \mu 1600 \text{ W/cm}^2$ of UVC intensity at 6" distance from surface
On/Off safety switch	1 Year Electrical Warranty (except UVC Lamp)
Tool-free & easy to change lamp	2 Years Mechanical Warranty
Spectrally polished & focussed reflector designed to maximize UVC output at 6" distance from surface	

Safety Precautions

- THE SABER MUST BE USED BY A TRAINED OPERATOR. Safety glasses & gloves provided should ALWAYS be worn AT ALL TIMES when using the VIOlight Saber.
- DO NOT ATTEMPT to operate the VIOlight Saber when people & animals are present and might directly exposed to the UVC light. It should be ideally operated when there are no other people or animals at least 10ft around the surface being disinfected.
- POINT the VIOlight Saber directly at the surface / object to be disinfected without any interference.
- UVC RADIATION CAN CAUSE SERIOUS DAMAGE TO SKIN AND EYES IF EXPOSED. In case of accidental exposure please turn off the VIOlight Saber immediately and consult with a medical doctor.



Operating Instructions

- VIOlight Saber is recommended to be positioned at a distance of 6 inches from the surface to be disinfected for high-level disinfection. However it can be moved down up to 2 inches from the surface for higher intensity of UVC.
- Point the VIOlight Saber towards the area to sterilize and then TURN ON the power.
- For effective disinfection move the VIOlight Saber slowly over the surface to be disinfected.
- Expose the area to be disinfected to VIOlight Saber from 2 seconds to 2 minutes depending on the pathogens to be inactivated. Different pathogens are susceptible to UVC radiation at different rates. To determine time needed for disinfection please refer to the DOSAGE CHART recommendations.
- Please refer to the OPERATION & MAINTENANCE MANUAL provided for detailed instructions on operating and maintaining the unit.

About VIOlight

We know light. And beyond



We have known light and worked with it for 40 years. From making critical parts for the global lamp makers to manufacturing specialty lighting products ourselves we have been involved with the lighting industry in one form or another.

VIOlight is the result of our evolution beyond light in a literal and metaphorical sense. VIOlight range of products use UVC radiation which is literally beyond the visible part of the electromagnetic spectrum. And metaphorically, with these products we are now moving beyond mere lighting to disinfection by lighting. VIOlight brings a fresh new take on the decades-old science of UVC disinfection.

We aim to provide our customers products that are aesthetically designed, scientifically validated & affordably priced. VIOlight is committed to being a leader in pathogen control and sanitization space.